



Installation instructions crimp

The modular connection is an established, inexpensive plug-in system that allows easy installation and activation of the light barrier.

1. Shorten the modular-cable to the appropriate length

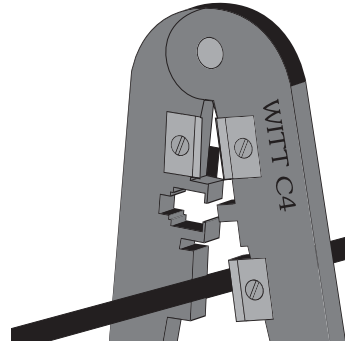

2. Strip 6mm off the cable

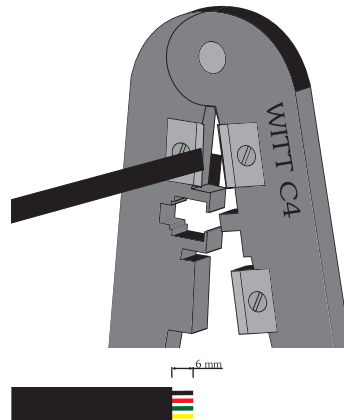

3. Arrange the cable in the color sequence shown and insert into the correctly positioned plug



4. Place the cable and plug into the C4 and crimp them together. Done!

